



Pop-up Tents



Remove the frame, the tent roof and the tent pegs from the transport bag.



Pull apart the frame slightly.



Place the tent roof over the frame. Make sure that the corners of the roof are parallel to the corners of the frame.



Attach the tent roof to the corner points of the frame using Velcro.



Now attach the tent roof to the central profile bars of the frame using Velcro.



Press down the red plastic clips on the support legs. The frame can now be pulled apart completely until the safety locks click into place. We recommend getting four other people to help you with this step. Pull the legs to the desired height until you hear them click into place.

Adjustable height:
1,75 m | 1,85 m | 1,93 m | 2,03 m | 2,10 m
(Lower edge of the roof (printed fabric))



With the help of the lever in the middle the tent roof can be tightened.

If required, you can anchor the support legs to the ground using pegs.



This is your pop-up tent in full size.