



## Outdoor roller banner




Remove the system casing, the spring-suspended three-part support bar, the feet and the four tent pegs from the transport bag.




Turn the casing so that the base is facing upwards. Place one of the feet on the casing so that the „nib“ of the foot fits into the opening on the base of the casing. Secure the second foot in the same way.




Turn the casing along with the feet. Twist the oval-shaped bracket knobs above and below the casing in a clockwise direction to the right until they are perpendicular to the casing and locked in place at the tip in the casing groove. If needed, you can secure the feet to the ground using tent pegs.

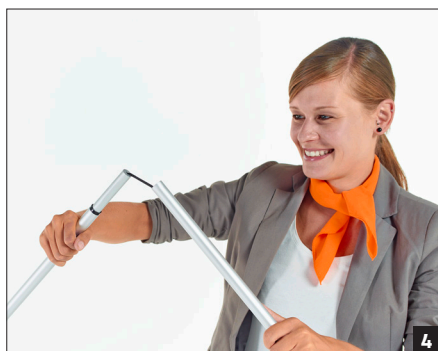

Assemble the individual parts of the support bar. Make sure that the individual parts are properly pressed together.

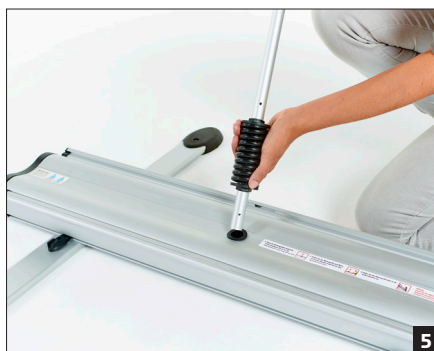

Insert the support bar into the opening provided on the system with the spring facing downwards. Ensure that the support bar is also properly fixed into the lower notch and that it is secure.

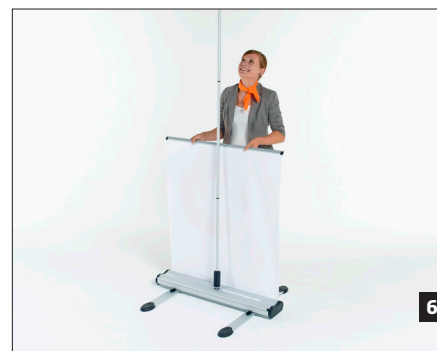


Draw the print smoothly out of the casing and extend it straightly along the clamping rail. Use your other hand to keep the support bar secure if necessary. You can also place your foot gently on one of the feet of the system to increase the stability.



Using the hook, gently and carefully fix the clamping rail to the support bar.



Now draw the second print smoothly out of the casing and fix the clamping rail to the support bar using the hook.

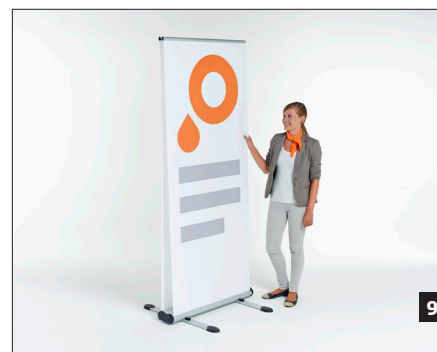

Here is your Outdoor Roller banner in full size.