



# Premium Comfort roller banner



Remove the system casing and the two-part telescopic rod from the transport bag.



Assemble the two parts of the telescopic rod. Make sure that the individual parts are properly pressed together.



Loosen the individual pieces of the telescopic rod, separate them and then retighten them. You can also just extend the telescopic rod at the end using the attached clamping rail, so you don't need to use a stepladder or stool.



Insert the support bar into the opening provided on the system. Ensure that the support bar is also properly fixed into the lower notch and that it is secure. There are two adjusting screws on the bottom of the system casing, which allow you to balance out any unevenness in the floor and increase the stability of the Roller banner.



Draw the print smoothly out of the casing and extend it straightly along the clamping rail. Use your other hand to keep the support bar secure if necessary.



Using the slot in the plastic mechanism, gently and carefully fix the clamping rail to the support bar. Now you can fully extend the telescopic rod upwards, until the print is fully stretched. Loosen the parts of the telescopic rod that have not yet been extended, separate them and then retighten them.



Here is your Premium Comfort Roller banner in full size.