



# Light column



1

The light column is integrated in the transport bag.



2

Open the cover of the light column using the upper zip.



3

Connect the power plug to a 220 V power source.



4

Once the system is connected to a power source, it will inflate automatically. Carefully guide the print up along the system and make sure that the system does not tip to one side.




5

Now you can open the lower zip for access to the light source.



6

You can turn on the light, if necessary. Please note that this should be turned off roughly 15 minutes before disassembly of the light column to allow it to cool down and thus prevent damage to the print.

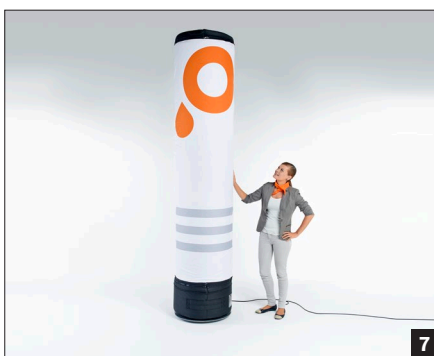

7

Here is your light column in full size.