



L banners



1

Remove the print, base and telescopic rod from the transport bag.



2

Loosen the individual pieces of the telescopic rod, separate them and then retighten them. You can also just extend the telescopic rod at the end using the attached clamping rail, so you don't need to use a stepladder or stool.



3

Insert the telescopic rod into the corresponding opening in the base until it is fixed in place.



4

Insert the base into the centre plastic clip of the lower clamping rail of the print.



5

Carefully unroll the print.



6

Fix the upper clamping rail from the print in place using your hand and insert the telescopic rod into the centre plastic clip of the clamping rail.



7

Now you can fully extend the telescopic rod upwards, until the print is fully stretched. Loosen the parts of the telescopic rod that have not yet been extended, separate them and then retighten them.



8

Here is your L-banner in full size.