



PVC exhibition counter




Remove the print, the worm fence system, the tabletop and the magnetic rail from the transport bag.



Unfold the worm fence system by pulling apart the upper corners on the outside. Hold the system in place while you set it up.




Insert the arrow-shaped magnetic rails with the arrow-shaped side into the indentation below the black fasteners of the worm fence system.

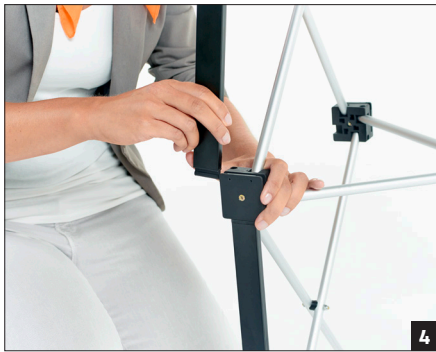

Slide the opposite side of the magnetic rails laterally into the precast groove above the fasteners.




Insert the straight magnetic rails with the pencil-shaped sides on the top and bottom into the black fasteners on the long sides of the worm fence system. Repeat this process with the semicircular magnetic rails on the short sides of the system.

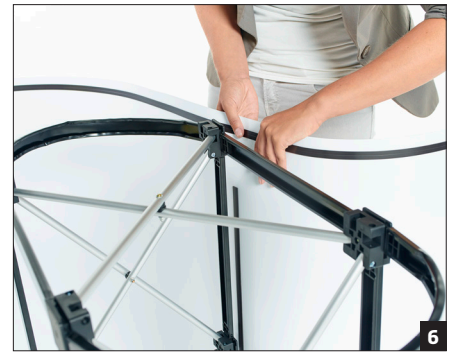


Place the centre magnetic strip of the print on the front vertical magnetic rail and fix it in place.



Fix the print around the entire system and secure the outer parts of the print to the vertical magnetic rail on the back. If necessary, adjust all the magnet points to ensure that the print is fixed securely to the system.

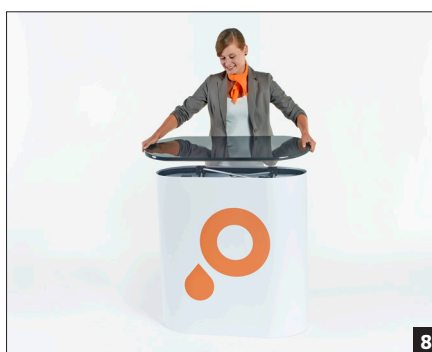

Insert the tabletop with the attached metal pins into the hollowed spaces provided on the worm fence system.

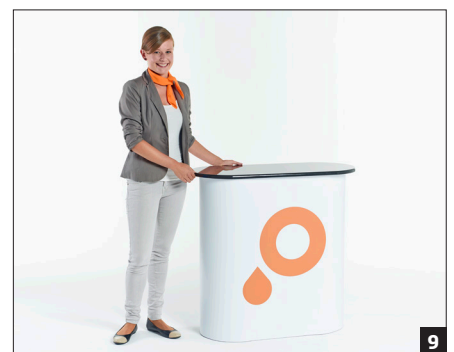

Here is your PVC exhibition counter in full size.